

CFB Mini-Sweeper

Manual


Thank you for purchasing the CFB Mini-Sweeper.
Please read these instructions carefully before using this product.

Specific parameters

Product name: Mini-Sweeper
Product size: 8.5 x 8.5 x 7.5 cm
Colour: White
Weight: 200g
Battery: 3.7V 1400mAh
Charging time: approx. 60min
Working time: approx.90min


Content

Mini-Sweeper
Charging cable x 1
Brush

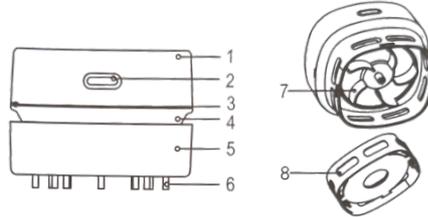


1	Up cover	5	Down cover
2	ON/OFF	6	Down cover brush hair
3	Charging port	7	Vane
4	Middle shell	8	Dustproof net

Operating Method

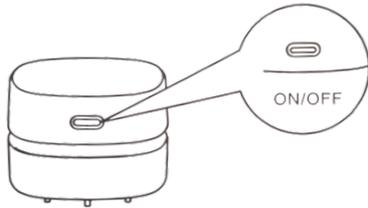


1. Push the button to turn on the power supply, push the button again to turn off the power supply.

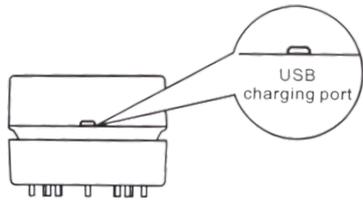


2. Plug the USB cable into the charging port and connect the adapter to start charging.

Cleaning Method

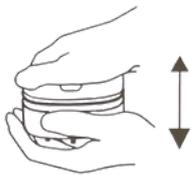

1. Open the rear cover in the direction shown after turning off the power button.

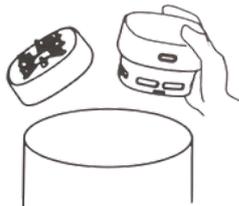


2. Throw the remains of the back cover and the machine into the dustbin. Note: You must clean the remains of the rear cover.



3. Put the up cover back after closing the back cover firmly according to the direction of the arrow.

Fest verschließen
und zurücksetzen

Product Maintenance Method

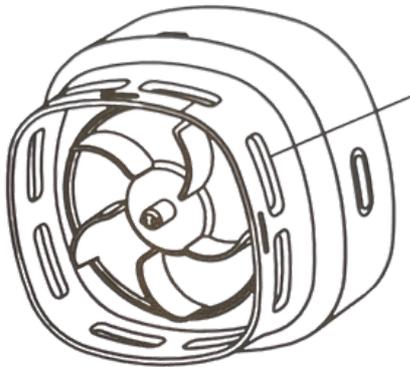

Filter

Note:

Take out the filter and clean it with a brush. Please do not wash the filter with water. This way you avoid water entering the machine and causing damage.

Please note

1. The rated charging current is 1A.
2. Please use 1A adapter for charging to avoid the charging speed is too low or the function is damaged.
3. Please do not put your fingers deep into the dust absorber
4. Please do not disassemble or modify this product
5. This product is used to clean thin and small particles such as rubber residue, keyboard dust and paper residue on the table. Please do not use it to clean larger stones and liquids so as not to affect its operation.

Disposal Advice

Please dispose of all used electrical products in a designated waste disposal area. Everyone is responsible for protecting the environment.